



Quick Reference Guide For Honeywell equipment

Quick Arm: Push and hold the “ARM” button for 3 seconds one time for “Stay Mode” and two times for “Away Mode”.

Stay Mode: To be used to arm the perimeter of the system with the persons staying inside (or if you have pets that are moving throughout the house). Enter your 4 digit access code and the “STAY” button (#3 on the keypad). Anyone entering after the system is armed in Stay Mode must disarm the system with a valid access code within the entry delay time.

Away Mode: To be used to arm the entire system when nobody will be staying inside. Enter your 4 digit access code and the “AWAY” BUTTOM (#2 on the keypad). Your exit delay time will begin, allowing you to leave. Anyone entering when the system is armed in the Away Mode must disarm the system with a valid access code within the entry delay time.

Instant Mode: To be used when staying inside and do not expect anyone to use an entry/exit door. Enter your 4 digit access code and the “INSTANT” button (#7 on the keypad). Alarm will sound immediately if any protected perimeter window or entry/exit door is opened.

Max Mode: To be used when leaving the premises for extended periods such as vacations, etc. Enter 4 digit access code and the “MAX” button (#44 on the keypad). Exit delay time will begin, allowing you to leave. Entry delay time will be turned off. Alarm will sound immediately if entry/exit doors are opened.

Disarming: To disarm the system, enter your 4 digit access code and the “OFF” button (#1 on the keypad)

Chimes: To turn door chimes on or off, enter you 4 digit access code and the “CHIMES” button (#9 on the keypad).

Memory of Alarm: When an alarm occurs, the keypad will display the zone numbers that caused the problem, and displays the type of alarm. To clear the memory, enter your 4 digit access code and the “OFF” button two times.

Entering New Access Codes: Enter the 4 digit master code and the “CODE” button (#8 on the keypad). Enter the user # (03-32) and the new access code.

Trouble Codes: If there is trouble on any part of the system, the keypad will display a trouble code. Record the code number, and call SDS for assistance.

Superior Detection Systems

8115 Isabella Lane

Suite 1

Brentwood, TN 37027

615-373-8330 or 800-594-0048

www.superiordetection.com